SHARP

Quick Start Guide

MODEL

HT-DV40H

DVD CINEMA

This Quick Start Guide will help you to correctly install and operate your system.

If you require any advice or assistance regarding your Sharp product, please visit our website www.sharp.co.uk/customersupport.aspx. Customers without Internet access may telephone 0845 880 0512 during office hours (or (01) 676 0648 if telephoning from Ireland).

Unplug all equipment before making any connections.

Aerial connection

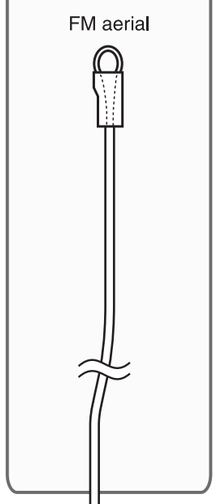

TV connection

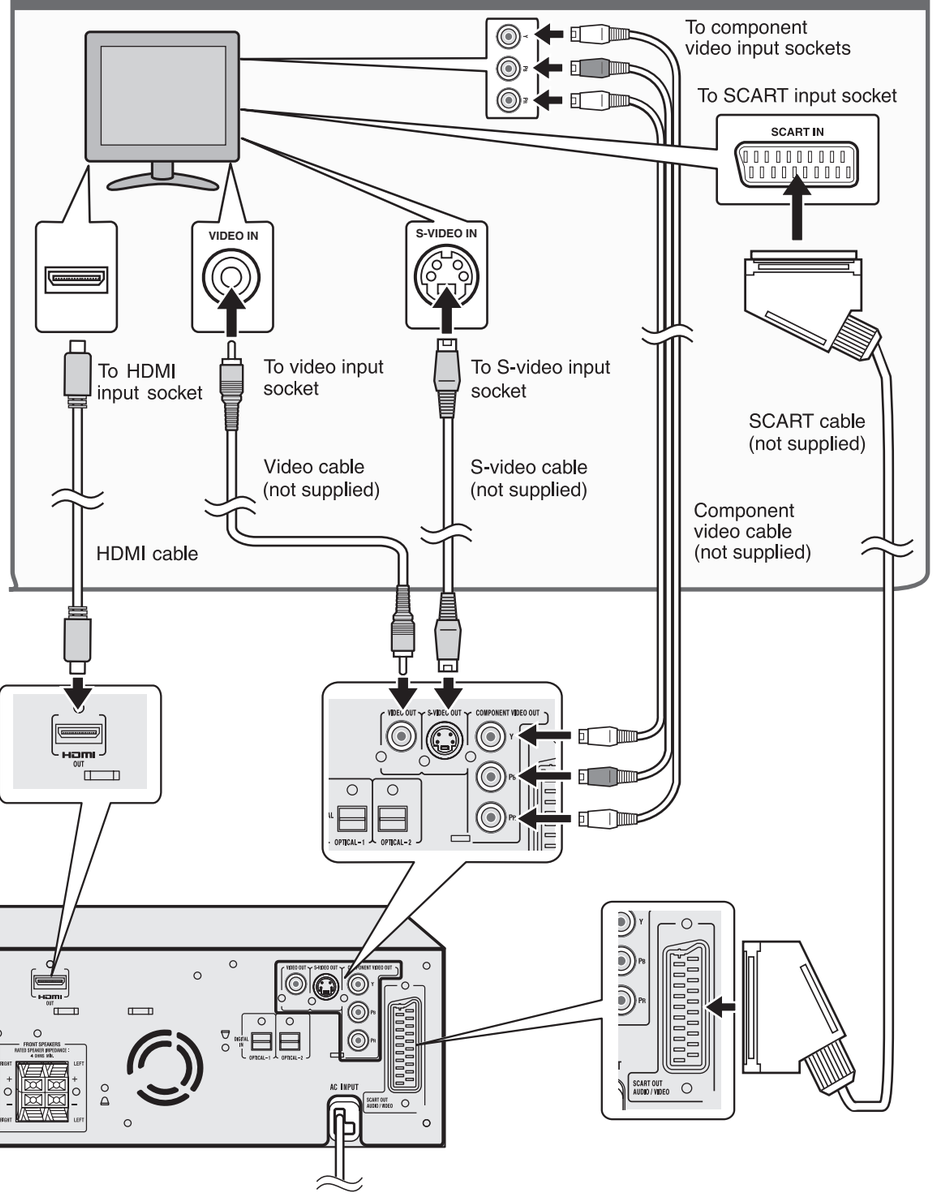

TINSEA227AWZZ
07M R AS ①

Speaker connection

Connecting speaker wires

To prevent accidental short circuits between ⊕ and ⊖ terminals, connect the speaker wires to the speakers first and then to the unit.

To install the speaker stand

1 Align the hole on the speaker stand to the hole on speaker. Fix them securely with the special screw provided.

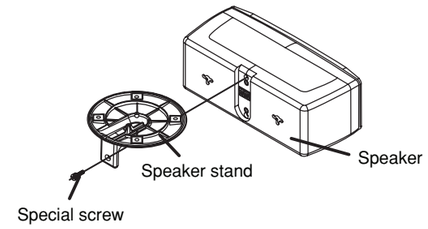

2 Route the speaker wire through the speaker stand hole. Connect the wire without insulation tube to the speaker minus (–) terminal, and the wire with red insulation tube to the speaker plus (+) terminal.

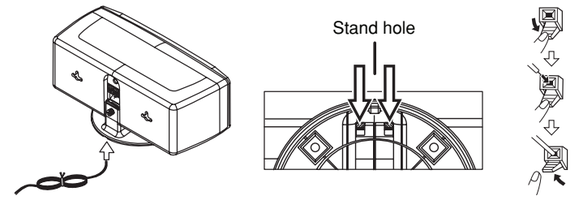

3 Connect the other end to the main unit.

4 Attach the stand cover.

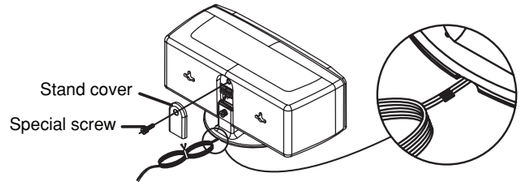

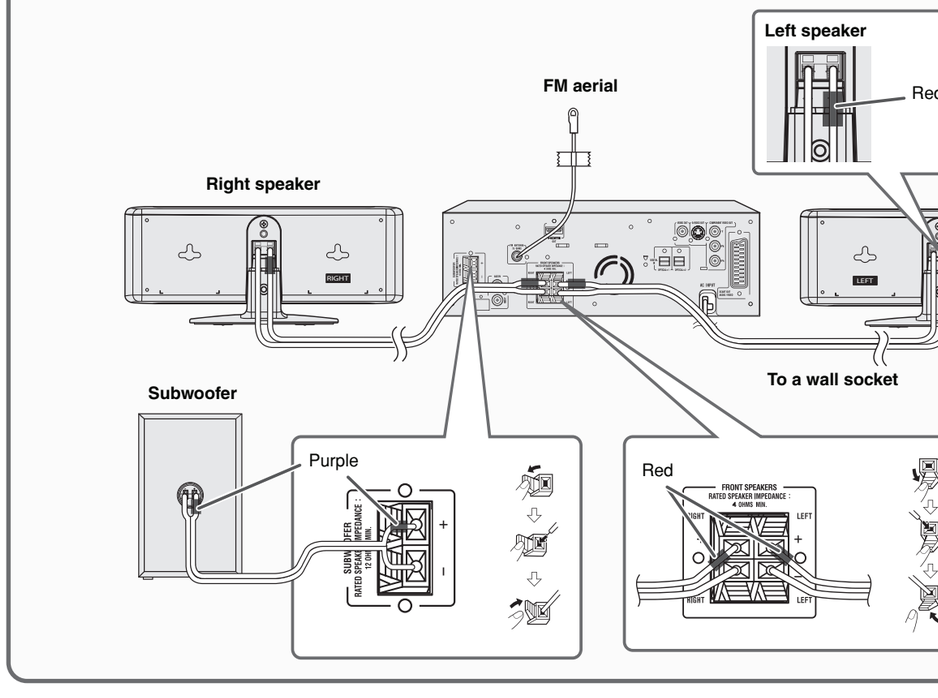

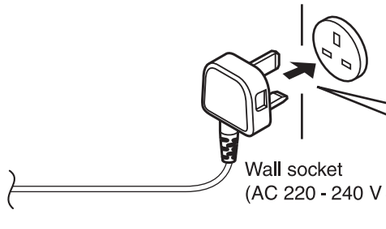

Do it last!

After checking all the connections have been made correctly, plug the AC power lead of this unit into the wall socket.

START

Listening to the DVD sound

Turn on the TV, and switch the input to the “VIDEO 1”, “VIDEO 2”, etc. accordingly.

Battery installation

Use 2 “AA” size batteries (UM/SUM-3, R6, HP-7 or similar).

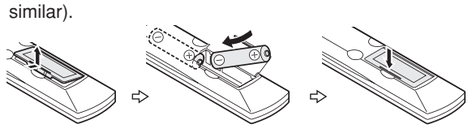

1 Open the battery cover.
2 Insert the batteries as shown.
3 Close the cover.

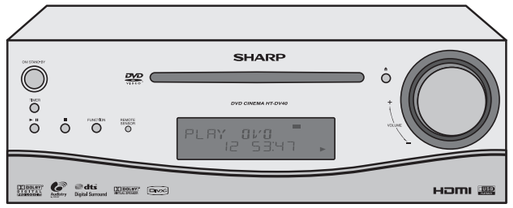

1 Press the ON/STAND-BY button to turn the power on.

ON / STAND-BY

Press the ON/STAND-BY button again to set the unit to the stand-by mode.

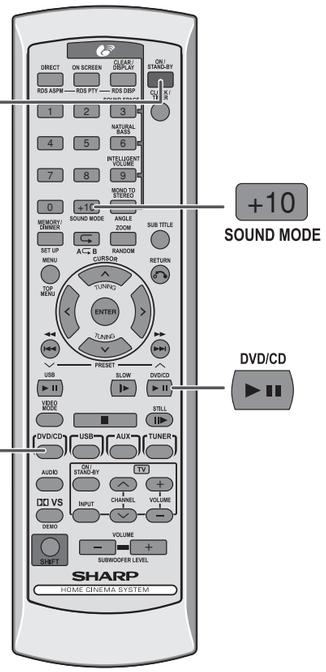

2 Press the DVD/CD button to set the input to “DVD”.

DVD/CD

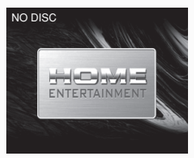

3 Insert the disc into the disc slot, label side up.

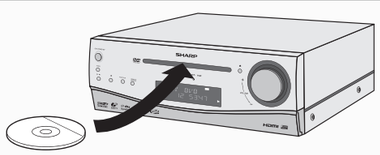

4 If playback does not start, press the DVD/CD ►II button.

DVD/CD

Enjoying various sounds

Refer to the operation manual (pages 32 - 35)

Select any of the 8 preset modes already set to the optimal sound quality levels.
Select a desired sound mode by pressing the SHIFT and SOUND MODE buttons simultaneously.

Preset sound mode	Display
STANDARD	STANDARD
CINEMA	CINEMA
NEWS	NEWS
MUSIC	MUSIC
SPORT	SPORT
NIGHT	NIGHT
BASS	BASS
TREBLE	TREBLE

Installation image:

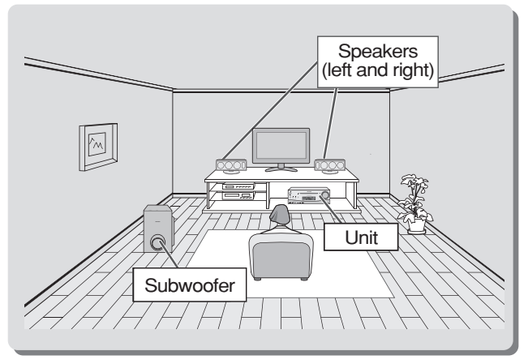

■ If trouble occurs

When this product is subjected to strong external interference (mechanical shock, excessive static electricity, abnormal supply voltage due to lightning, etc.) or if it is operated incorrectly, it may malfunction.

If such a problem occurs, do the following:

1 Set the unit to the stand-by mode and turn the power on again.
2 If the unit is not restored in the previous operation, unplug and plug in the unit, and then turn the power on.

Note:

If neither operation above restores the unit, clear all the memory by resetting it.

■ Factory reset, clearing all memory

1 Press the ON/STAND-BY button to enter the power stand-by mode.
2 Whilst pressing down the ⏏ button, press the ON/STAND-BY button until “CLEAR ALL” appears.



Caution:

This operation will erase all data stored in memory including clock, timer settings, tuner preset and CD programme.